

PURCHASED FROM

DATE OF PURCHASE

MODEL NO

OWNERS NAME

ADDRESS

Perforation

Accurist Helpline  
020 7447 3945

Further information or instructions can be obtained  
from the Accurist Helpline during office hours Monday to Friday.

Folding

Accurist

A Timeless British Classic

Chronograph Watch Setting Instructions  
Including CP00

## Registration

To register your Accurist watch, please go to [www accurist.co.uk/registration](http://www accurist.co.uk/registration) to enter some basic information so you can keep abreast of the latest special offers and product developments for Accurist Watches.

Accurist Watches Limited Telephone: +44 (0)20 7447 3900  
 Asher House Fax: +44 (0)20 7447 3949  
 Blackburn Road Email: [service@accurist.co.uk](mailto:service@accurist.co.uk)  
 West Hampstead  
 London, NW6 1AW

For latest information please check our website:  
[www accurist.co.uk](http://www accurist.co.uk)

Published Dec 2011

Folding

## For all other countries

1. Return the watch with payment to your nearest International service agent (see page 25).
2. Enclose a cheque for €12.50. This charge covers handling, return packing, postage via mail and insurance for loss or damage whilst being returned or undergoing repairs.

**No liability for loss or damage will be accepted without this remittance.**

Perforation

I enclose: ☐ cheque ☐ postal order ☐ credit card,

☐ debit card (issue no. ) payment for **£10.00 / €12.50**

Card No: 

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Expires: \_\_\_\_ / \_\_\_\_ / \_\_\_\_ \* CSC number: 

--	--	--

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Postcode: \_\_\_\_\_

Signature: \_\_\_\_\_

\* This is the last three digits on the signature strip of your card

## **Contents**

<b>How to use these instructions</b>	<b>3</b>
<b>CP00 Multi Function Operating Instructions</b>	<b>5</b>
<b>Using the Slide Rule Bezel</b>	<b>13</b>
<b>Care of your watch</b>	<b>14</b>
<b>Ceramic special Care Instructions (ceramic watches only)</b>	<b>18</b>
<b>WEEE Directive</b>	<b>20</b>
<b>Bracelet Adjustment</b>	<b>23</b>
<b>International Service Agents</b>	<b>25</b>
<b>Resistance to water</b>	<b>27</b>
<b>Accurist Quartz Guarantee</b>	<b>30</b>
<b>After Sales Service</b>	<b>32</b>
<b>Payment &amp; Postage Instructions</b>	<b>33</b>

### **How to use these instructions**

This booklet contains setting instructions for the Accurist Quartz Chronograph series of watches. Each section describes a particular calibre (also called watch movement) which offers a unique set of functions and features. As such, it is necessary to identify the correct calibre of your watch before proceeding to the appropriate section (see diagram on next page).


### **Further information**

The latest setting instructions, technical manuals and interactive instructions are available from our website at [www.accurist.co.uk](http://www.accurist.co.uk)


When on the Accurist website please click on the service area for more information.

The Accurist technical helpline is also available during office hours:  
+44 (0)20 7447 3945 or email [service@accurist.co.uk](mailto:service@accurist.co.uk)

## Caseback Markings

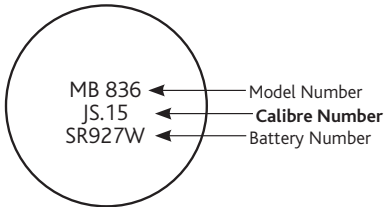

## 5 CP00 Operating Instructions (Multi Function)

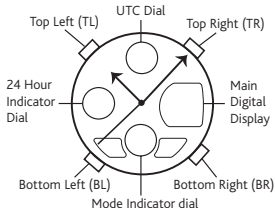

### KEY TO DIAGRAM

**UTC dial** - shows universal coordinated time (UTC) in 24 hour format. UTC (or GMT) is the standard from which all time zones are calculated.

**24 hour dial** - shows main hand time in 24 hour format. This can be used to determine the correct a.m. and p.m. settings.

**Mode indicator dial** - shows main hand time in 24 hour format. This can be used to determine the correct a.m and p.m. settings.


**Mode indicator dial** - shows the mode that the watch is in - TME (time), CAL (calendar), AL-1, 2 or 3 (alarm 1, 2 or 3), CHR (chronograph), TMR (timer), SET (set).

**Main digital display** - shows the digital time, calendar, alarms, chronograph or timer depending on which mode chosen.

**Button function displays** - indicates the function of each button at any moment. (see diagram on next page).

**To set the time:**

1. Push the bottom right hand button until the mode hand indicator points to TME.
2. Press and hold the upper left button for three seconds. The hour and minute hand will retract to the 12 O'clock position.
3. Select the time zone on the digital display by pressing the upper right button or the lower left button.
4. Pull the bottom right button out one click. The bottom part of the digital display will start flashing. Press the bottom left button to adjust for daylight saving time.
5. Press the upper right button. You will see the seconds flashing on the lower half of the digital display. Press the lower left button to reset the seconds to 00.

Top Left Button ———   
Bottom Left Button ———

 ——— Top Right Button  
————— Bottom Right Button

## CP00 Operating Instructions continued . . .

### To set the time zone

1. Setting the time zones allows you to add or remove cities on the digital display or switch between daylight saving and standard time. Begin by pressing the lower right button to move the mode hand indicator to SET mode on the bottom dial.
2. If the hour or minute hands are obscuring the digital display, press and hold the upper left button for three seconds. This will cause the hour and minute hand to retract to the 12 O'clock position.
3. Now pull the lower right button out one click. You will see the digital display flashing. Press the upper left button to select SET to display the city or OFF to not display the city. Press the lower left button to turn summer time on or off. Summer time is indicated on the lower part of the digital display. Daylight savings time must be manually set for each city.
4. Pressing the upper right button will allow you to scroll through all the cities. After setting, push the lower right button back in.



## Troubleshooting

### **The analogue hands block the digital display.**

1. Press and hold the upper left button for three seconds. The hour and minute hand will retract to the 12 O'clock position allowing a clear view of the digital display.
2. Press the upper left button to return the analogue hands to the previous position.

### **The analogue time does not match the digital time for the selected zone.**

1. Push the bottom right hand button until the mode indicator hand points to TME.
2. Select the time zone on the digital display by pressing the upper right button or the lower left button.
3. Press the upper right and lower left buttons simultaneously and release. The hour and minute hand will go to the time zone shown on the digital display. At this point the digital display may go to UTC or another time zone. Press the upper right or lower left button to scroll to the time zone you just set the analogue hands to.

**CP00 Operating Instructions continued . . .**

**Troubleshooting continued . . .**

**The analogue hands are not precisely synchronised with the digital time.**

1. Press the lower right button to move the mode indicator hand to CHR.
2. Pull the lower right button out one click. The hour, minute and UTC hands will retract towards the straight up 12 O'clock position. You will see UTC on the top half of the digital display.
3. Press the upper right button to advance the hands to the straight up 24-hour position. Use the lower left button to go in reverse.

4. Press the upper left button. You will see HR on the top half of the digital display. Press the upper right button to advance the hour and 24-hour hand clockwise until they both point straight up at the 24-hour position. Use the lower left button to move the hand anti-clockwise until it is pointing straight up at the 12 O'clock position.
5. Press the upper left button. You will see MIN on the top half of the digital display. Press the upper right button to advance the minute hand clockwise or the lower left button to move anti-clockwise until it is pointing straight up at the 12 O'clock position.
6. Push the lower right button back in one click.

CP00 Operating Instructions continued . . .

Troubleshooting continued . . .

**The watch malfunctions in some way and the above procedures do not work.**

1. Press the lower right button until the mode indicator hand points to TME.
2. Pull the lower right button out one click. Press the other three buttons down simultaneously for three seconds and release. You will see 8's on the digital display.
3. Press the upper left button. You will see UTC on the top half of the digital display. Press the upper right button to advance the hands of the top dial to the straight up 24-hour position. Use the lower left button to go in reverse.
4. Press the upper left button. You will see HR on the top half of the digital display. Press the upper right button to advance the hour and 24-hour hand clockwise until they both point straight up at the 24-hour position. Use the lower left button to move the hand anti-clockwise.

5. Press the upper left button. You will see MIN on the top half of the digital display. Press the upper right button to advance the minute hand clockwise or the lower left button to move anti-clockwise until it is pointing straight up at the 12 O'clock position.
6. Push the lower right button back in one click.

## **Using the Slide Rule Bezel**

For further information on the slide rule bezel please visit [www accurist.co.uk](http://www accurist.co.uk) and follow the service link.

## Care of your watch

### Avoid temperature extremes

1. Avoid leaving your watch in direct sunlight or in extremely warm conditions for long periods of time: this will cause malfunctioning and shorten the life of the battery.
2. Do not leave your watch for long periods of time in extremely cold places; this may cause your watch to gain or lose time. Should it begin to gain or lose time, place your watch on your wrist to restore its original accuracy.

### Avoid wet conditions

1. Do not operate the buttons when your watch is wet, even on models marked 'Water Resistant'
2. Check case back markings and refer to the Resistance to water section.

continued...

**Avoid strong shocks**

1. This watch will withstand the bumps and jars normally incurred during sports activities.
2. Avoid dropping your watch on the ground or otherwise imparting severe shock to it.

**Avoid strong magnetic fields**

1. Keep your watch away from strong magnets.
2. Generally, your watch is not affected by magnetic fields from household appliances such as television sets and stereo equipment.

continued...



## Care of your watch continued . . .

### **Avoid harmful chemicals, solvents & gases**

1. Avoid wearing your watch in the presence of strong chemicals, solvents or gases.
2. Avoid materials such as gasoline, benzene, paint thinner, alcohol, spray cosmetics, nail polish, nail polish remover, adhesives or paint.

### **Periodic inspection**

1. A regular 4 to 5 years service by an authorised Accurist technician will ensure trouble free operation.
2. Refer to the After Sales Service section for details.

continued...

**IMPORTANT**

1. Keep the batteries out of reach of infants and small children. Should accidental ingestion occur consult a doctor immediately.
2. Do not attempt to replace the battery yourself as this invalidates your guarantee.

**Keep you watch clean**

Wipe off any moisture that adheres to the case, glass or band with a soft, clean cloth.

## **Ceramic special Care Instructions** (ceramic watches only)

Every care has been taken in the manufacture of this ceramic watch but due to the nature of the material used extra care should be taken.

**The ceramic although scratchproof is not shatterproof therefore care must be taken to avoid dropping or knocking the watch against a hard surface.**

We would therefore recommend storing the watch in its watch box or suitable storage box when not being worn. To clean just use a clean damp lint free cloth do not use any cleaning agents as these may affect the look and lustre of the ceramic.

## **Ceramic special Care Instructions** continued...

### **Important**

- **Ceramics will not wear over time**
- **Ceramics are scratch-resistant**
- **Ceramic is a naturally porous material**
- **Ceramic is fragile and should be handled with care**

You should note that whilst our guarantee covers the watch movement the ceramic parts and glass are not covered other than for manufacturing defects.

## WEEE Directive

The crossed-out wheeled bin indicates that used electrical and electronic equipment should not be mixed with general domestic waste. There is a separate collection point for these products.

The objectives of the Community's environment policy are, in particular, to preserve, protect and improve the quality of the environment, protect human health and utilise natural resources prudently and rationally.



## **Disposal information for consumers**

### **EU Countries**

In accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment. Private households within the EU states may return their used electrical and electronic equipment to designated collection points free of charge. Equally return your product to an Accurist stockist or Accurist headquarters, who will see to the products disposal. Please contact your authority for further details.

## **WEEE Directive continued . . .**

### **Non EU Countries**

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal. Otherwise please return to Accurist headquarters, who will see to the products disposal.

### **Disposal information for business users**

#### **EU Countries**

Please contact your Accurist dealer who will inform you about the 'take back' of products.

#### **Non EU Countries**

If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal. Otherwise please return to Accurist headquarters, who will see to the products disposal.

## Bracelet Adjustment

The bracelet requires a small adjustment and the model has a Z-type clasp.



1. Depress the end of the spring bar on the centre clasp with a pin.



2. Relocate the spring bar in an alternative hole.



**The bracelet requires a significant adjustment or the model does not have a Z-type clasp.**

1. Use the enclosed wrist gauge to measure and mark the size of your wrist.
2. Return the completed wrist gauge with your watch.
3. Follow the instructions in the After Sales Service section to return your watch for adjustment. Your watch will be adjusted free of charge.

## **International Service Agents**

### **International Service Headquarters**

Accurist Watches Limited, Asher House, Blackburn Road, West Hampstead,  
London, NW6 1AW

Tel: +44 (0)20 7447 3945, Fax: +44 (0)20 7447 3946

### **Netherlands**

Sabre Nederland B.V., Ellermanstraat 23, 1099 BX Amsterdam, The Netherlands

Tel: 0031 20 692 8888, Fax: 0031 20 665 2184

### **Malta**

Maxi Quartz Ltd, 311-313 Zabbar Road, Fgura, Malta

Tel: 00356 21806661, Fax: 00356 21676393

## **International Service Agents** continued...

### **Kingdom of Saudi Arabia**

Al Asasyah, Sitteen Street, P.O. Box 19248 - 19249, Jeddah 21435

Tel: 00966 261 92035, Fax: 00966 676 2262

### **Cyprus**

Timeworx Ltd, 45 Andrea Demetriou St, Nicosia 2024, Cyprus

Tel: 00357 22441328, Fax: 00357 22441329

### **USA**

Parsec Enterprises Inc, 7501 N.Harker Drive, Peoria , IL, 61615

Tel 1 800 359 2508

## Resistance to water

INDICATIONS ON DIAL OR CASEBACK		LIGHT SPRAY, PERSPIRATION, LIGHT RAIN, ETC...	SWIMMING ETC...
DIAL	CASEBACK		
-	WATER RESISTANT	OK	X
WATER RESISTANT 50M (5 ATM)	WATER RESISTANT	OK	OK
WATER RESISTANT 100M (10 ATM)	WATER RESISTANT	OK	OK
WATER RESISTANT 150M (15 ATM) AND DEEPER	WATER RESISTANT	OK	OK

## Resistance to water continued...

28

INDICATIONS ON DIAL OR CASEBACK		SKIN DIVING: DIVING WITHOUT AN AIR TANK
DIAL	CASEBACK	
-	WATER RESISTANT	X
WATER RESISTANT 50M (5 ATM)	WATER RESISTANT	X
WATER RESISTANT 100M (10 ATM)	WATER RESISTANT	OK
WATER RESISTANT 150M (15 ATM) AND DEEPER	WATER RESISTANT	OK

## **Resistance to water** continued...

**IMPORTANT - NEVER PULL OUT THE CROWN WHEN THE WATCH IS WET.**

- Tighten screwlock crown completely.
- Water resistance is not a permanent property. We strongly recommend you return your watch for resealing every 4 - 5 years and/or when changing batteries.
- "Water resistant" may sometimes be abbreviated as "Water resist" or "WR".
- Never pull out the crown when the watch is wet.
- Always set the crown in the normal position.

## Accurist Quartz Guarantee

The terms of this guarantee provide rights that are in addition to your statutory rights and do not in any way limit or otherwise affect those statutory rights.

Your Accurist watch is guaranteed for 3 years from the date of original retail purchase against any malfunction of the watch movement due to defective materials or workmanship. This guarantee is applicable only to watches purchased in the United Kingdom. This guarantee does not cover the following: Breakages caused from maltreatment, mishandling or accident; Water damage unless marked water resistant (5ATM or above); batteries; the replacement or repair of bracelets and leather watch straps. To make a claim under the guarantee please return your watch directly to the International Service Headquarters at the address set out on page 25 or an International Service Agent.

**Accurist Quartz Guarantee continued . . .**

When returning your watch, please indicate brief details of the nature of the problem and the repair required.

We will, at our option, repair or replace your watch with a model of similar appearance or value.

After the expiry of this guarantee the Accurist Service Centre and International Service Agents are at your complete disposal.

We will be pleased to quote for routine maintenance, oiling or repair of your watch by our factory trained staff of experts.

This guarantee is provided by Accurist Watches Limited of Asher House, Blackburn Road, West Hampstead, London, NW6 1AW, England, United Kingdom



## After Sales Service

Each Accurist watch comes with a lifetime commitment to quality after sales service. Our award winning customer service team are dedicated to providing expert servicing from bracelet adjustments to full overhaul. We pride ourselves in identifying our customer's requirements and reacting to their individual needs. An expert watchmaker personally services each watch and Accurist guarantees quality at every step of the process.

## Payment & Postage Instructions

1. Complete the payment details form opposite.
2. Return the watch and payment details form together with this guarantee to the Accurist Service Centre address listed on page 25.
3. Enclose a cheque, postal order or MasterCard/Visa payment for £10.00 payable to Accurist Service Centre. This charge covers handling, return packing, postage via mail and insurance for loss or damage whilst being returned or undergoing repairs.

**No liability for loss or damage will be accepted without this remittance.**

4. Please do not return your presentation box as we cannot guarantee its return.